

H87

SPECS AND INSTRUCTION MANUAL

HELP@QWERTYKEY.RO
QWERTYKEY.EU
QWERTYKEY.RO

GAMING
MECHANICAL
KEYBOARD

 
SCAN ME
QR CODE

TECH SPECIFICATIONS

MODEL: QwertyKey H87
KEY NR: 87 Key
CONNECTIVITY: Type C Wired, Bluetooth, Wireless
STABILIZER TYPE: Plate-mounted
PCB TYPE: Hotswap 3/5 pins, full RGB

ANTI-GHOST: NKRO
POLLING RATE: 1000hz
COMPATIBILITY: WINDOWS/MAC
DIMENSION: 360 x 132 x 40 mm
WEIGHT: 0,9 kg

QWERTYKEY.EU
QWERTYKEY.RO

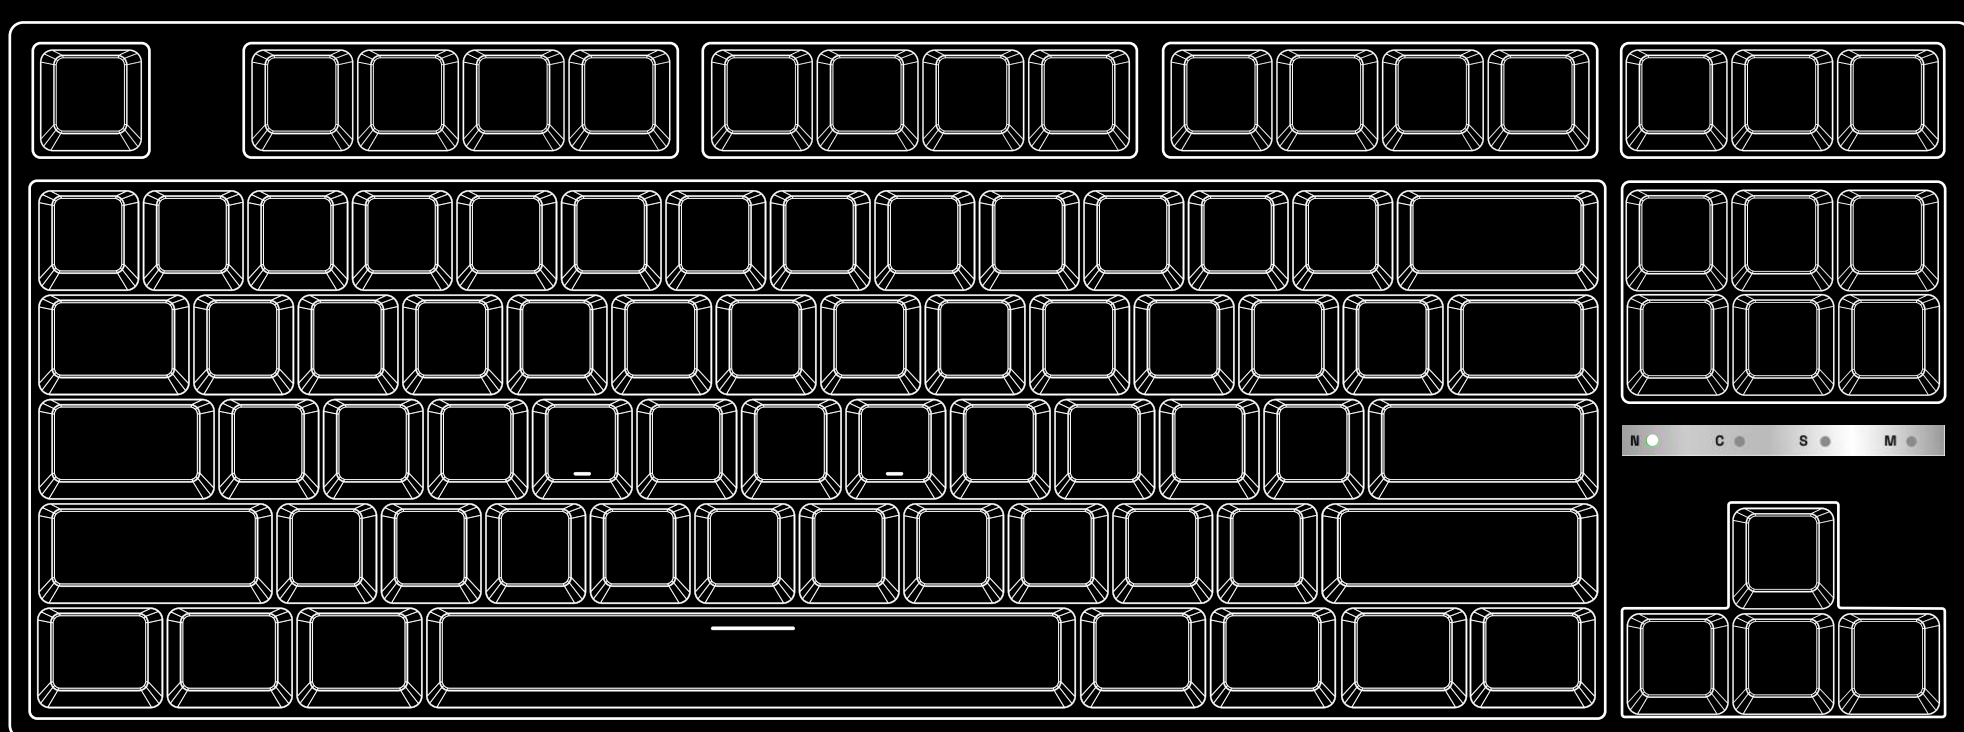


SPECIFICAȚII TEHNICE


MODEL: QwertyKey H87
NR TASTE: 87 taste
CONECTIVITATE: cablu Type C, Bluetooth, Wireless
TIP STABILIZATOR: Plate-mounted
TIP PCB: Hotswap 3/5 pins, full RGB

ANTI-GHOSTING: NKRO
RATĂ DE POLLING: 1000Hz
COMPATIBILITATE: WINDOWS/MAC
DIMENSIUNIL: 360 x 132 x 40 mm
GREUTATE: 0,9 kg

 
QWERTYKEY.EU
QWERTYKEY.RO

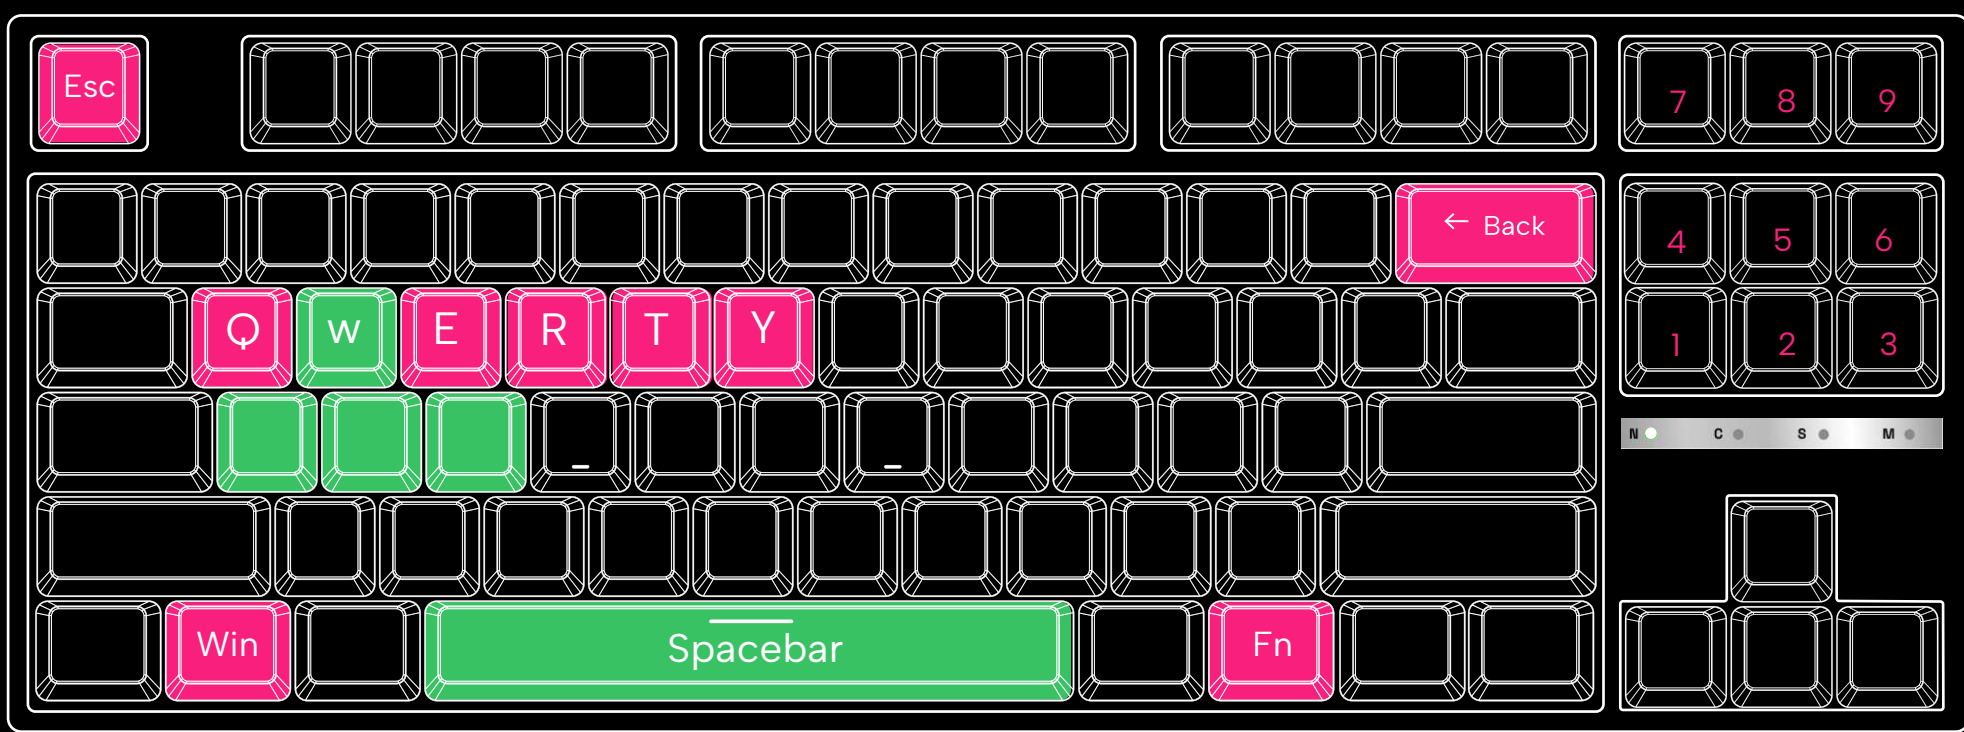

Fn + Win → Win
Fn + Esc → Reset
Fn + Q → 2.4G
Fn + W → 1, 2, 3, 4, 5, 6, 7, 8, 9
Fn + E → $\frac{1}{2}$
Fn + R → $\frac{2}{3}$
Fn + T → $\frac{3}{4}$
Fn + Y → Wire mode
Fn + Spacebar → Switch the auto sleeping mode between 5min (11), 10min (2G), 30min (3H) and Non-Sleeping (4S), 50sec (5%)
Battery level indicate: When Press the FN key, 6^(20%), 7^(40%), 8^(60%), 9^(80%), 0^(100%) key to indicate the battery level

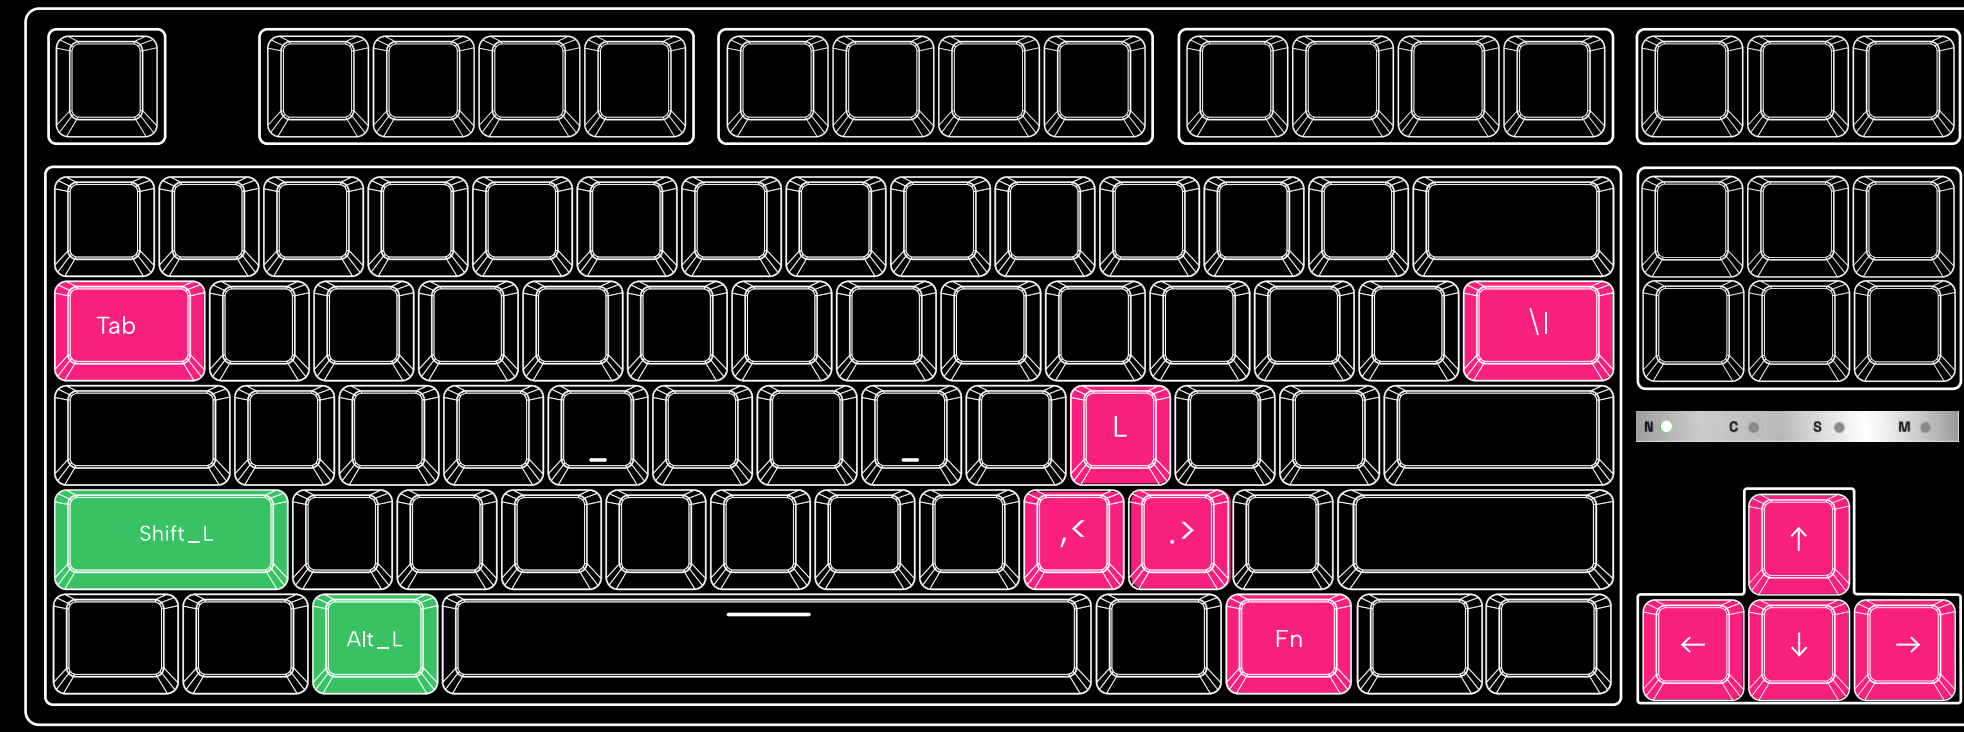 

Fn + V → RGB
Fn + Tab → $\frac{1}{2}$ → $\frac{2}{3}$ → $\frac{3}{4}$
Fn + ↓ → $\frac{1}{2}$ → $\frac{2}{3}$ → $\frac{3}{4}$
Fn + ↑ → $\frac{1}{2}$ → $\frac{2}{3}$ → $\frac{3}{4}$
Fn + CapsLock → ON/OFF
Fn + Shift_L → Backlit DIY Mode (Shift_L will flash white)
Fn + Shift_L → Press FN+SHIFT_L to edit the backlit for each key, press again to finish
Fn + → → $\frac{1}{2}$ → $\frac{2}{3}$
Fn + ← → $\frac{1}{2}$ → $\frac{2}{3}$
Fn + < → Windows
Fn + > → Apple
Fn + L → Press to turn off the lowcharging battery light indicator
Fn + Alt_L → Backlit switch between Red/Green/Blue

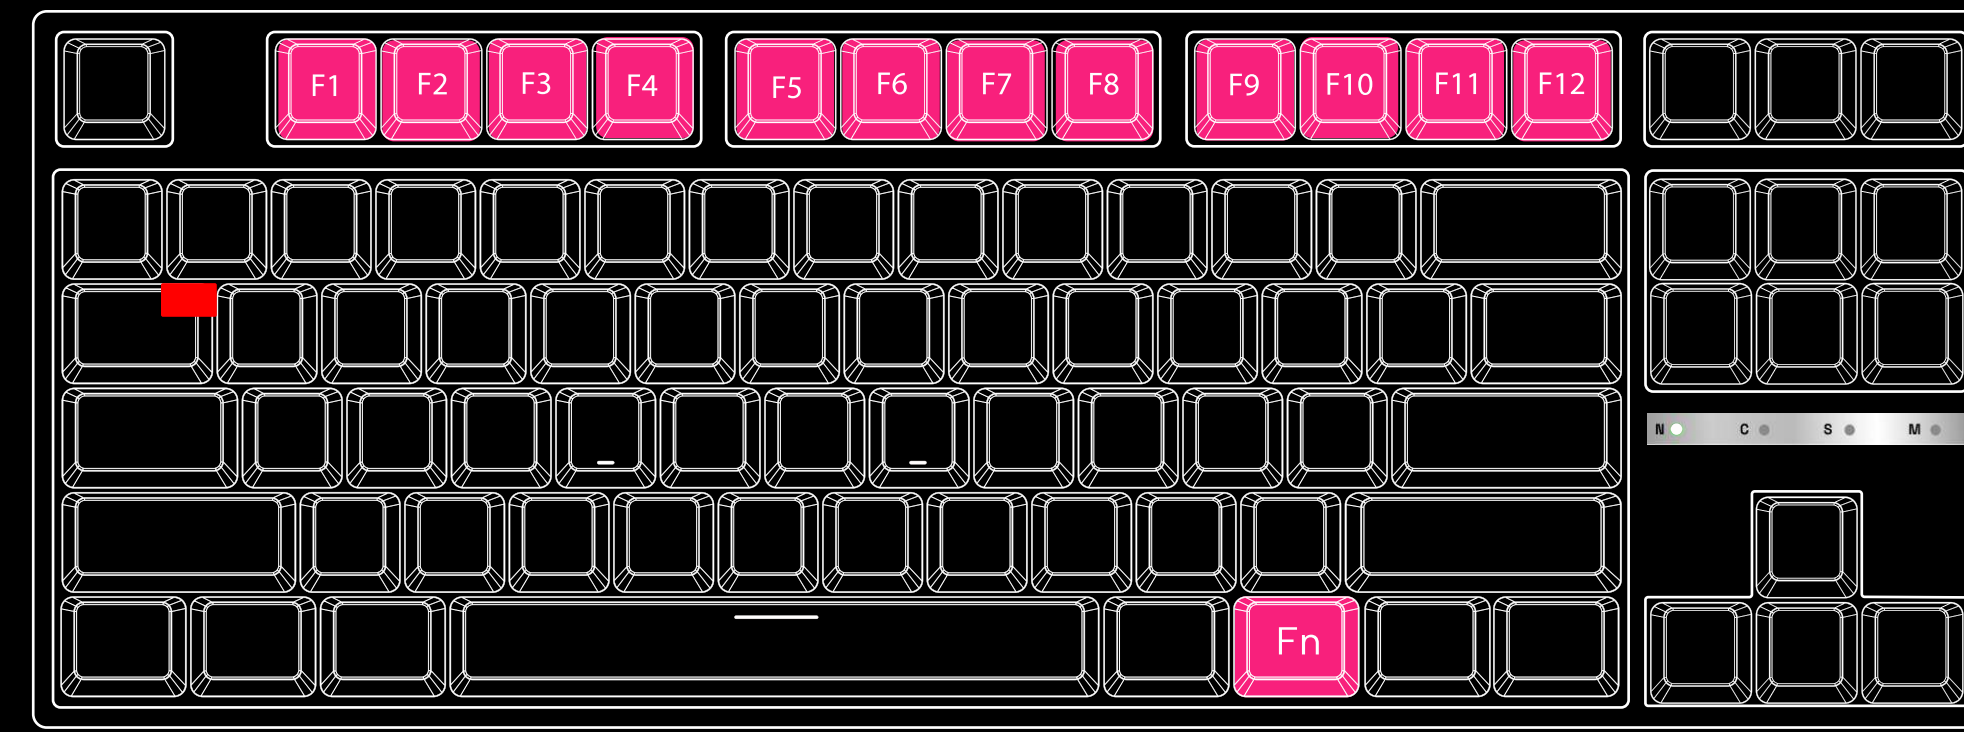 

Fn + F1 → Music
Fn + F2 → Volume
Fn + F3 → Volume
Fn + F4 → Volume
Fn + F5 → Volume
Fn + F6 → Volume
Fn + F7 → Play/Pause
Fn + F8 → Play/Pause
Fn + F9 → Play/Pause
Fn + F10 → Play/Pause
Fn + F11 → Play/Pause
Fn + F12 → Play/Pause
CapsLock Mac mode
Number Pad Scroll Lock
Battery indicator light: when battery is low the red light flashes rapidly.
Battery indicator: when the battery is charging, the blue light blinks slowly.
Battery indicator: when the battery is fully charged, the green light stays on.

REPLACING KEYCAPS AND SWITCHES

TOOLS INCLUDED
Keycap Puller
Switch Puller
USB Type C cable

INSTALLING SWITCHES

- Check that all the metallic pins of the switch are perfectly straight.
- Align the switch vertically.
- Press the switch down until you hear a click. This means your switch clips have attached themselves to the keyboard plate.
- In case the switch doesn't work, check the metal pins again.

 
Push straight DOWN

Before installing switches, be sure the pins are clean and straight.

REMOVE SWITCHES

- Grab your switch puller and align the gripping teeth vertically (on the Y-Axis) at the center of the switch, as shown in the graphic example below.
- Grab the switch with the switch puller and apply pressure until the switch releases itself from the plate.
- Using firm but gentle force pull the switch away from the keyboard using vertical motion.

For any technical issues, please send an email to help@qwertykey.ro with your order number and a detailed description of your problem.

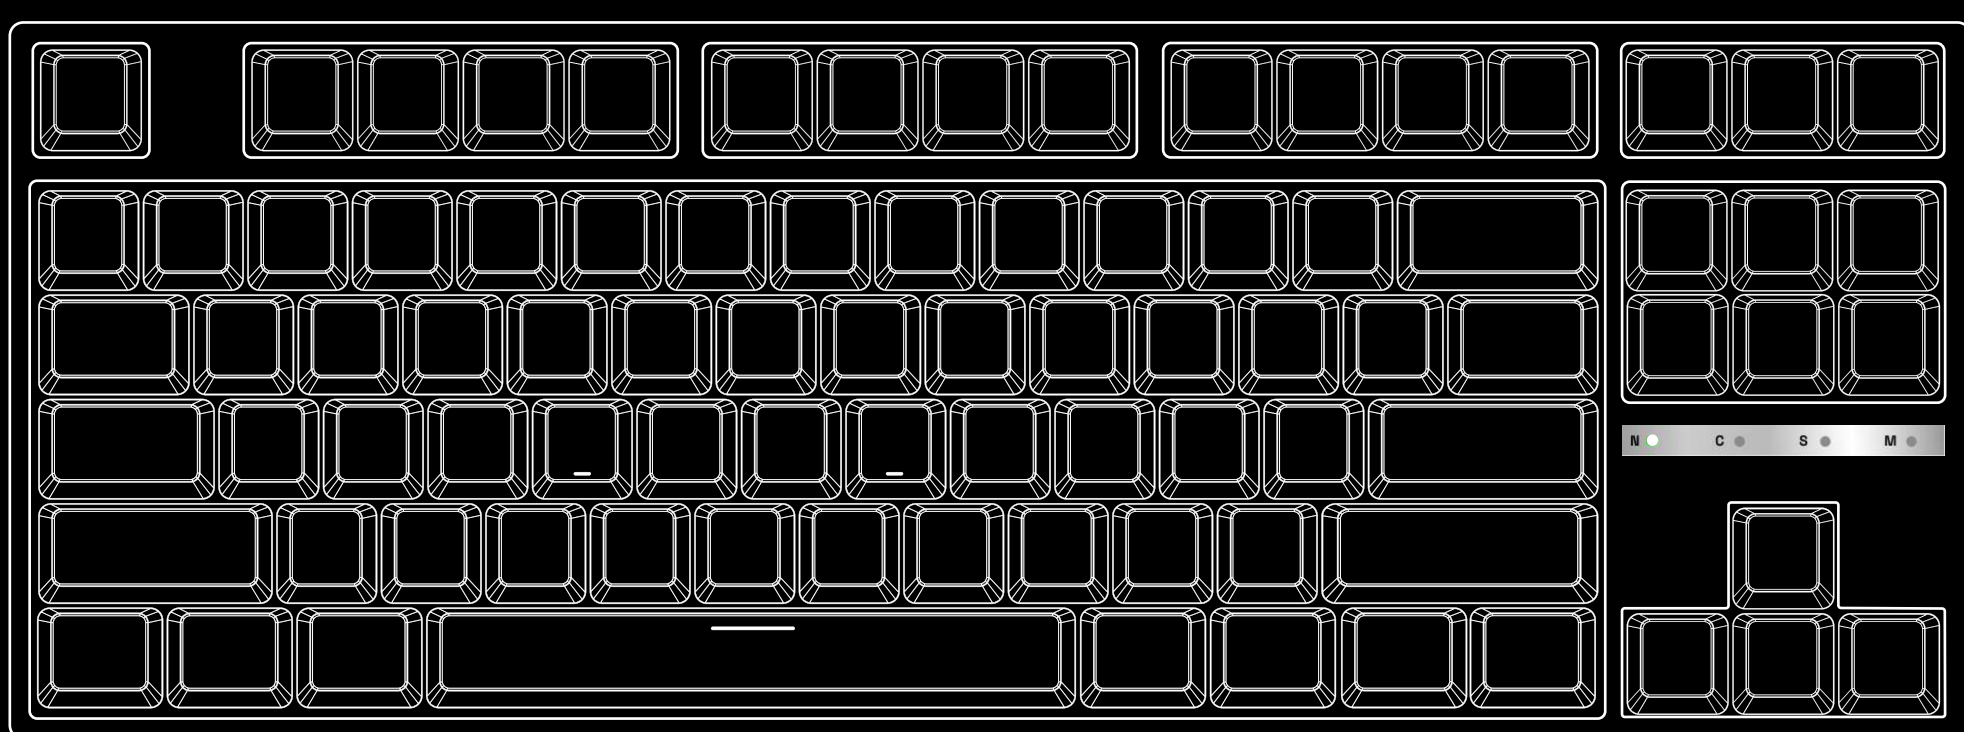


SPECIFICAȚII TEHNICE


MODEL: QwertyKey H87
NR TASTE: 87 taste
CONECTIVITATE: cablu Type C, Bluetooth, Wireless
TIP STABILIZATOR: Plate-mounted
TIP PCB: Hotswap 3/5 pins, full RGB

ANTI-GHOSTING: NKRO
RATĂ DE POLLING: 1000Hz
COMPATIBILITATE: WINDOWS/MAC
DIMENSIUNIL: 360 x 132 x 40 mm
GREUTATE: 0,9 kg

 
QWERTYKEY.EU
QWERTYKEY.RO

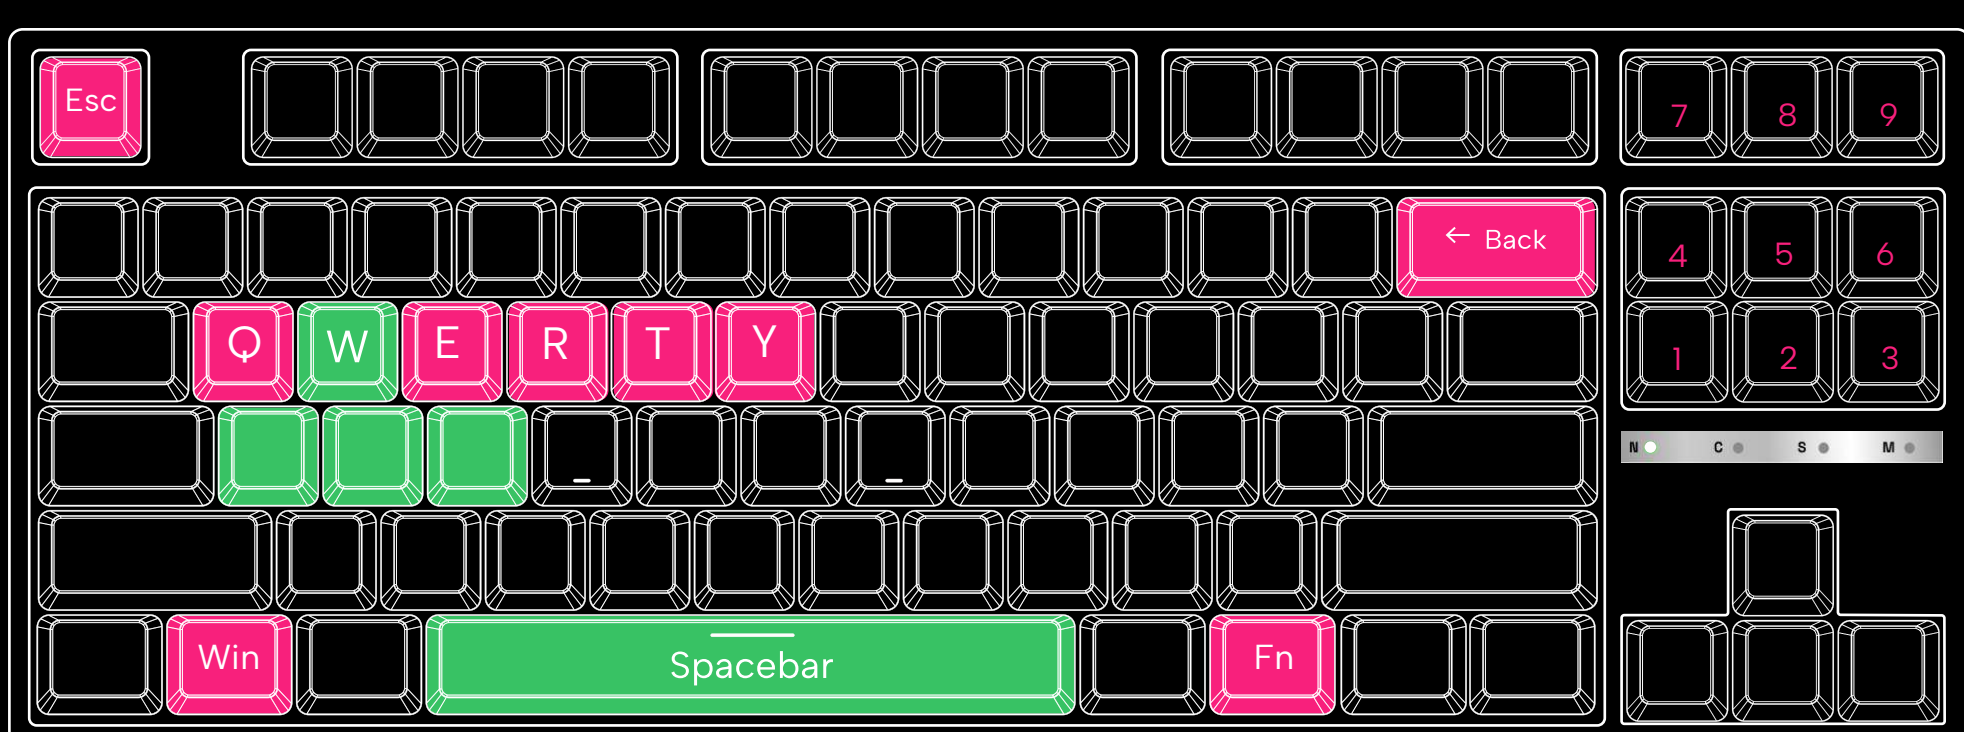

Fn + Win → Win
Fn + Esc → Reset
Fn + Q → 2.4G
Fn + W → 1, 2, 3, 4, 5, 6, 7, 8, 9
Fn + E → $\frac{1}{2}$
Fn + R → $\frac{2}{3}$
Fn + T → $\frac{3}{4}$
Fn + Y → Modul cablu
Fn + Spacebar → Comută modul repaus automat între 5 minute (11), 10 minute (2G), 30 minute (3H), fără repaus (4S) și 50 secunde (5%)
Când apeși tasta FN, tastele 6^(20%), 7^(40%), 8^(60%)*, 9^(80%), 0^(100%) indică nivelul bateriei.

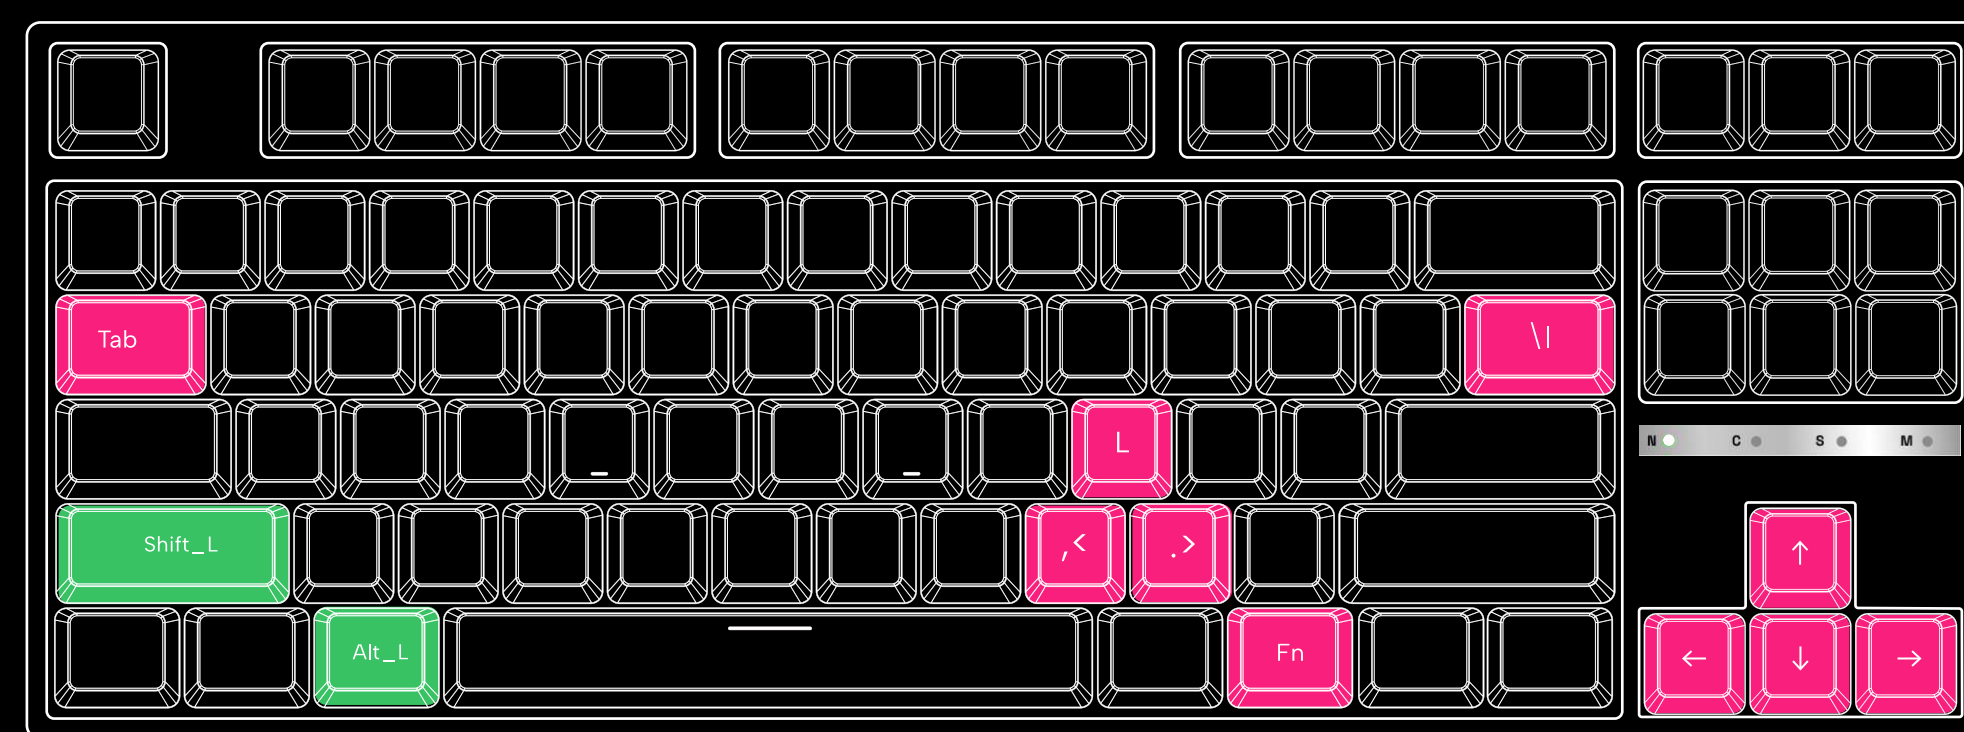 

Fn + V → RGB
Fn + Tab → $\frac{1}{2}$ → $\frac{2}{3}$ → $\frac{3}{4}$
Fn + ↓ → $\frac{1}{2}$ → $\frac{2}{3}$ → $\frac{3}{4}$
Fn + ↑ → $\frac{1}{2}$ → $\frac{2}{3}$ → $\frac{3}{4}$
Fn + CapsLock → ON/OFF
Fn + Shift_L → Mod DIY pentru iluminare (Shift_L va clipi albi)
Fn + Shift_L → Apeșă FN + SHIFT_L pentru a edita iluminarea fiecărei taste, apeșă din nou pentru a finaliza.
Fn + → → $\frac{1}{2}$ → $\frac{2}{3}$
Fn + ← → $\frac{1}{2}$ → $\frac{2}{3}$
Fn + < → Windows
Fn + > → Apple
Fn + L → Apeșă pentru a opri indicatorul luminos al bateriei descărcată în indicare.
Fn + Alt_L → Comutare iluminare de fundal între Roșu/Verde/Albastru

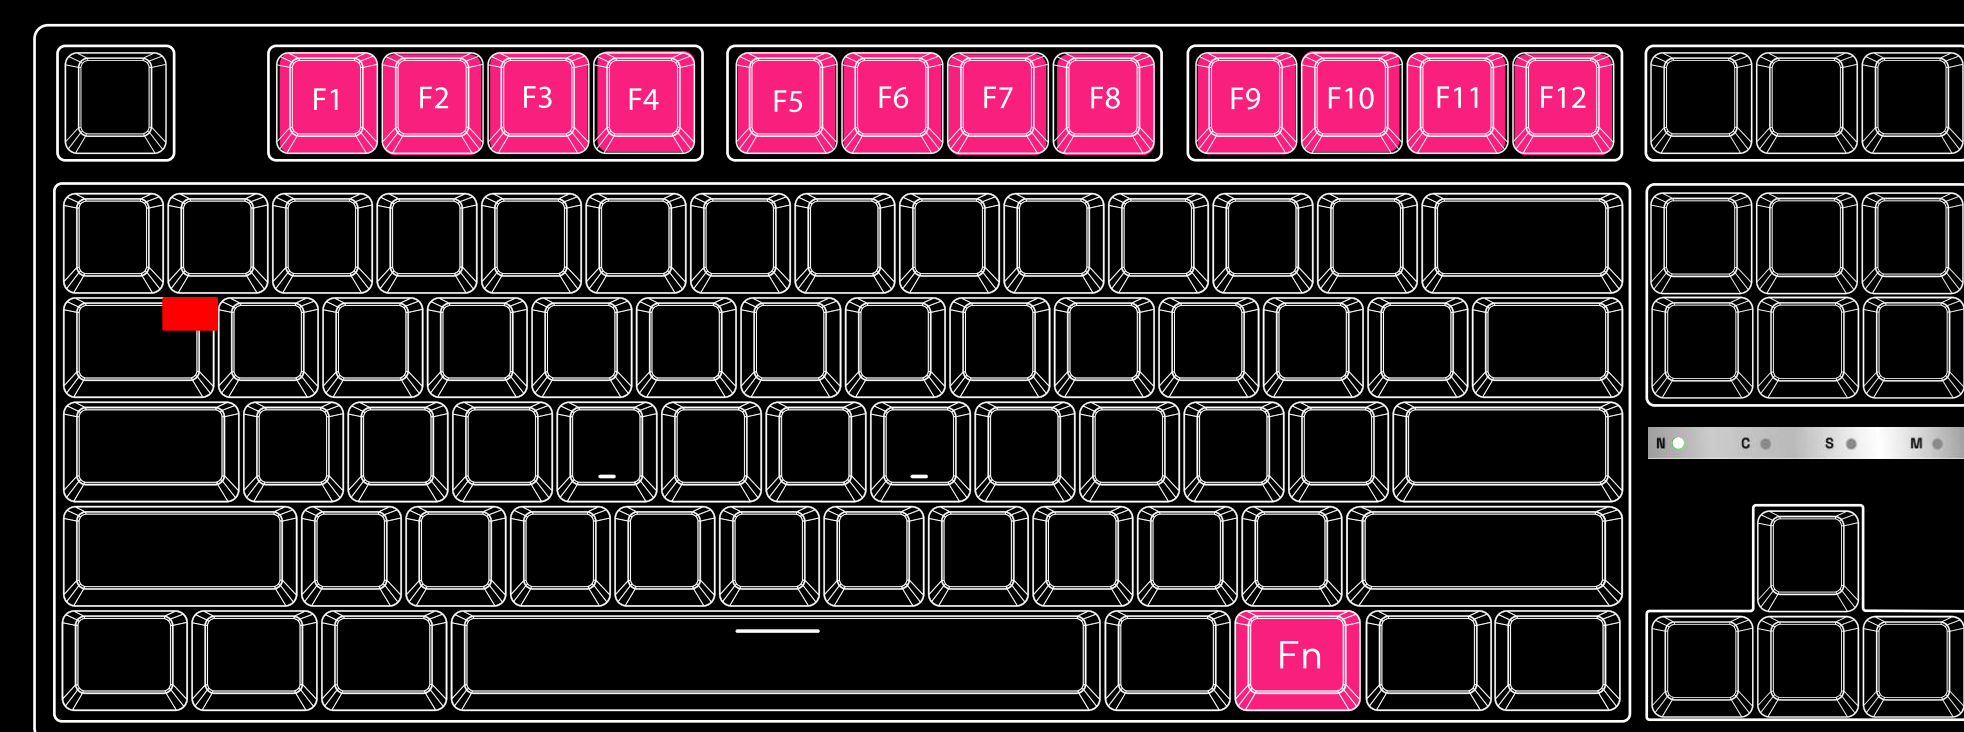 

Fn + F1 → Music
Fn + F2 → Volume
Fn + F3 → Volume
Fn + F4 → Volume
Fn + F5 → Volume
Fn + F6 → Volume
Fn + F7 → Play/Pause
Fn + F8 → Play/Pause
Fn + F9 → Play/Pause
Fn + F10 → Play/Pause
Fn + F11 → Play/Pause
Fn + F12 → Play/Pause
CapsLock Mod Mac
Number Pad Scroll Lock
Indicatorul luminos al bateriei: când bateria este descărcată, lumina roșie clipește rapid.
Indicatorul luminos al bateriei: când bateria se încarcă, lumina albastră clipește lent.
Indicatorul luminos al bateriei: când bateria este încărcată, lumina verde rămâne aprinsă.

ÎNLOCUIREA TASTELOR ȘI A SWITCH-URILOR

ACCESORII INCLUSE
Keycap Puller
Switch Puller
USB Type C cable

INSTALARE SWITCH-URI

- Verifică dacă toate pinii metalici ai switch-ului sunt perfect drepte.
- Alinați switch-ul vertical.
- Apeșă switch-ul în jos până auzi un clic. Acest sunet indică faptul că pinii switch-ului s-au fixat pe placa tastaturii.
- În cazul în care switch-ul nu funcționează, verifică din nou pinii metalici.

Apasă drept în JOS

Înainte de a instala switch-urile, asigură-te că pinii sunt curăți și drepte.

ÎNDEPĂRTEAZĂ SWITCH-URILE

- În cazul în care switch-ul nu funcționează, verifică din nou pinii metalici.
- Prinde switch-ul cu extractorul și aplică presiune până când acesta se desprinde de pe placă.
- Folosind o forță fermă, dar delicată, trage switch-ul în sus, pe direcție verticală, pentru a-l îndepărta de tastatură.

Pentru orice problemă tehnică, te rugăm să trimiți un email la help@qwertykey.ro menționând numărul comenzii și o descriere detaliată a problemei.