 


H61

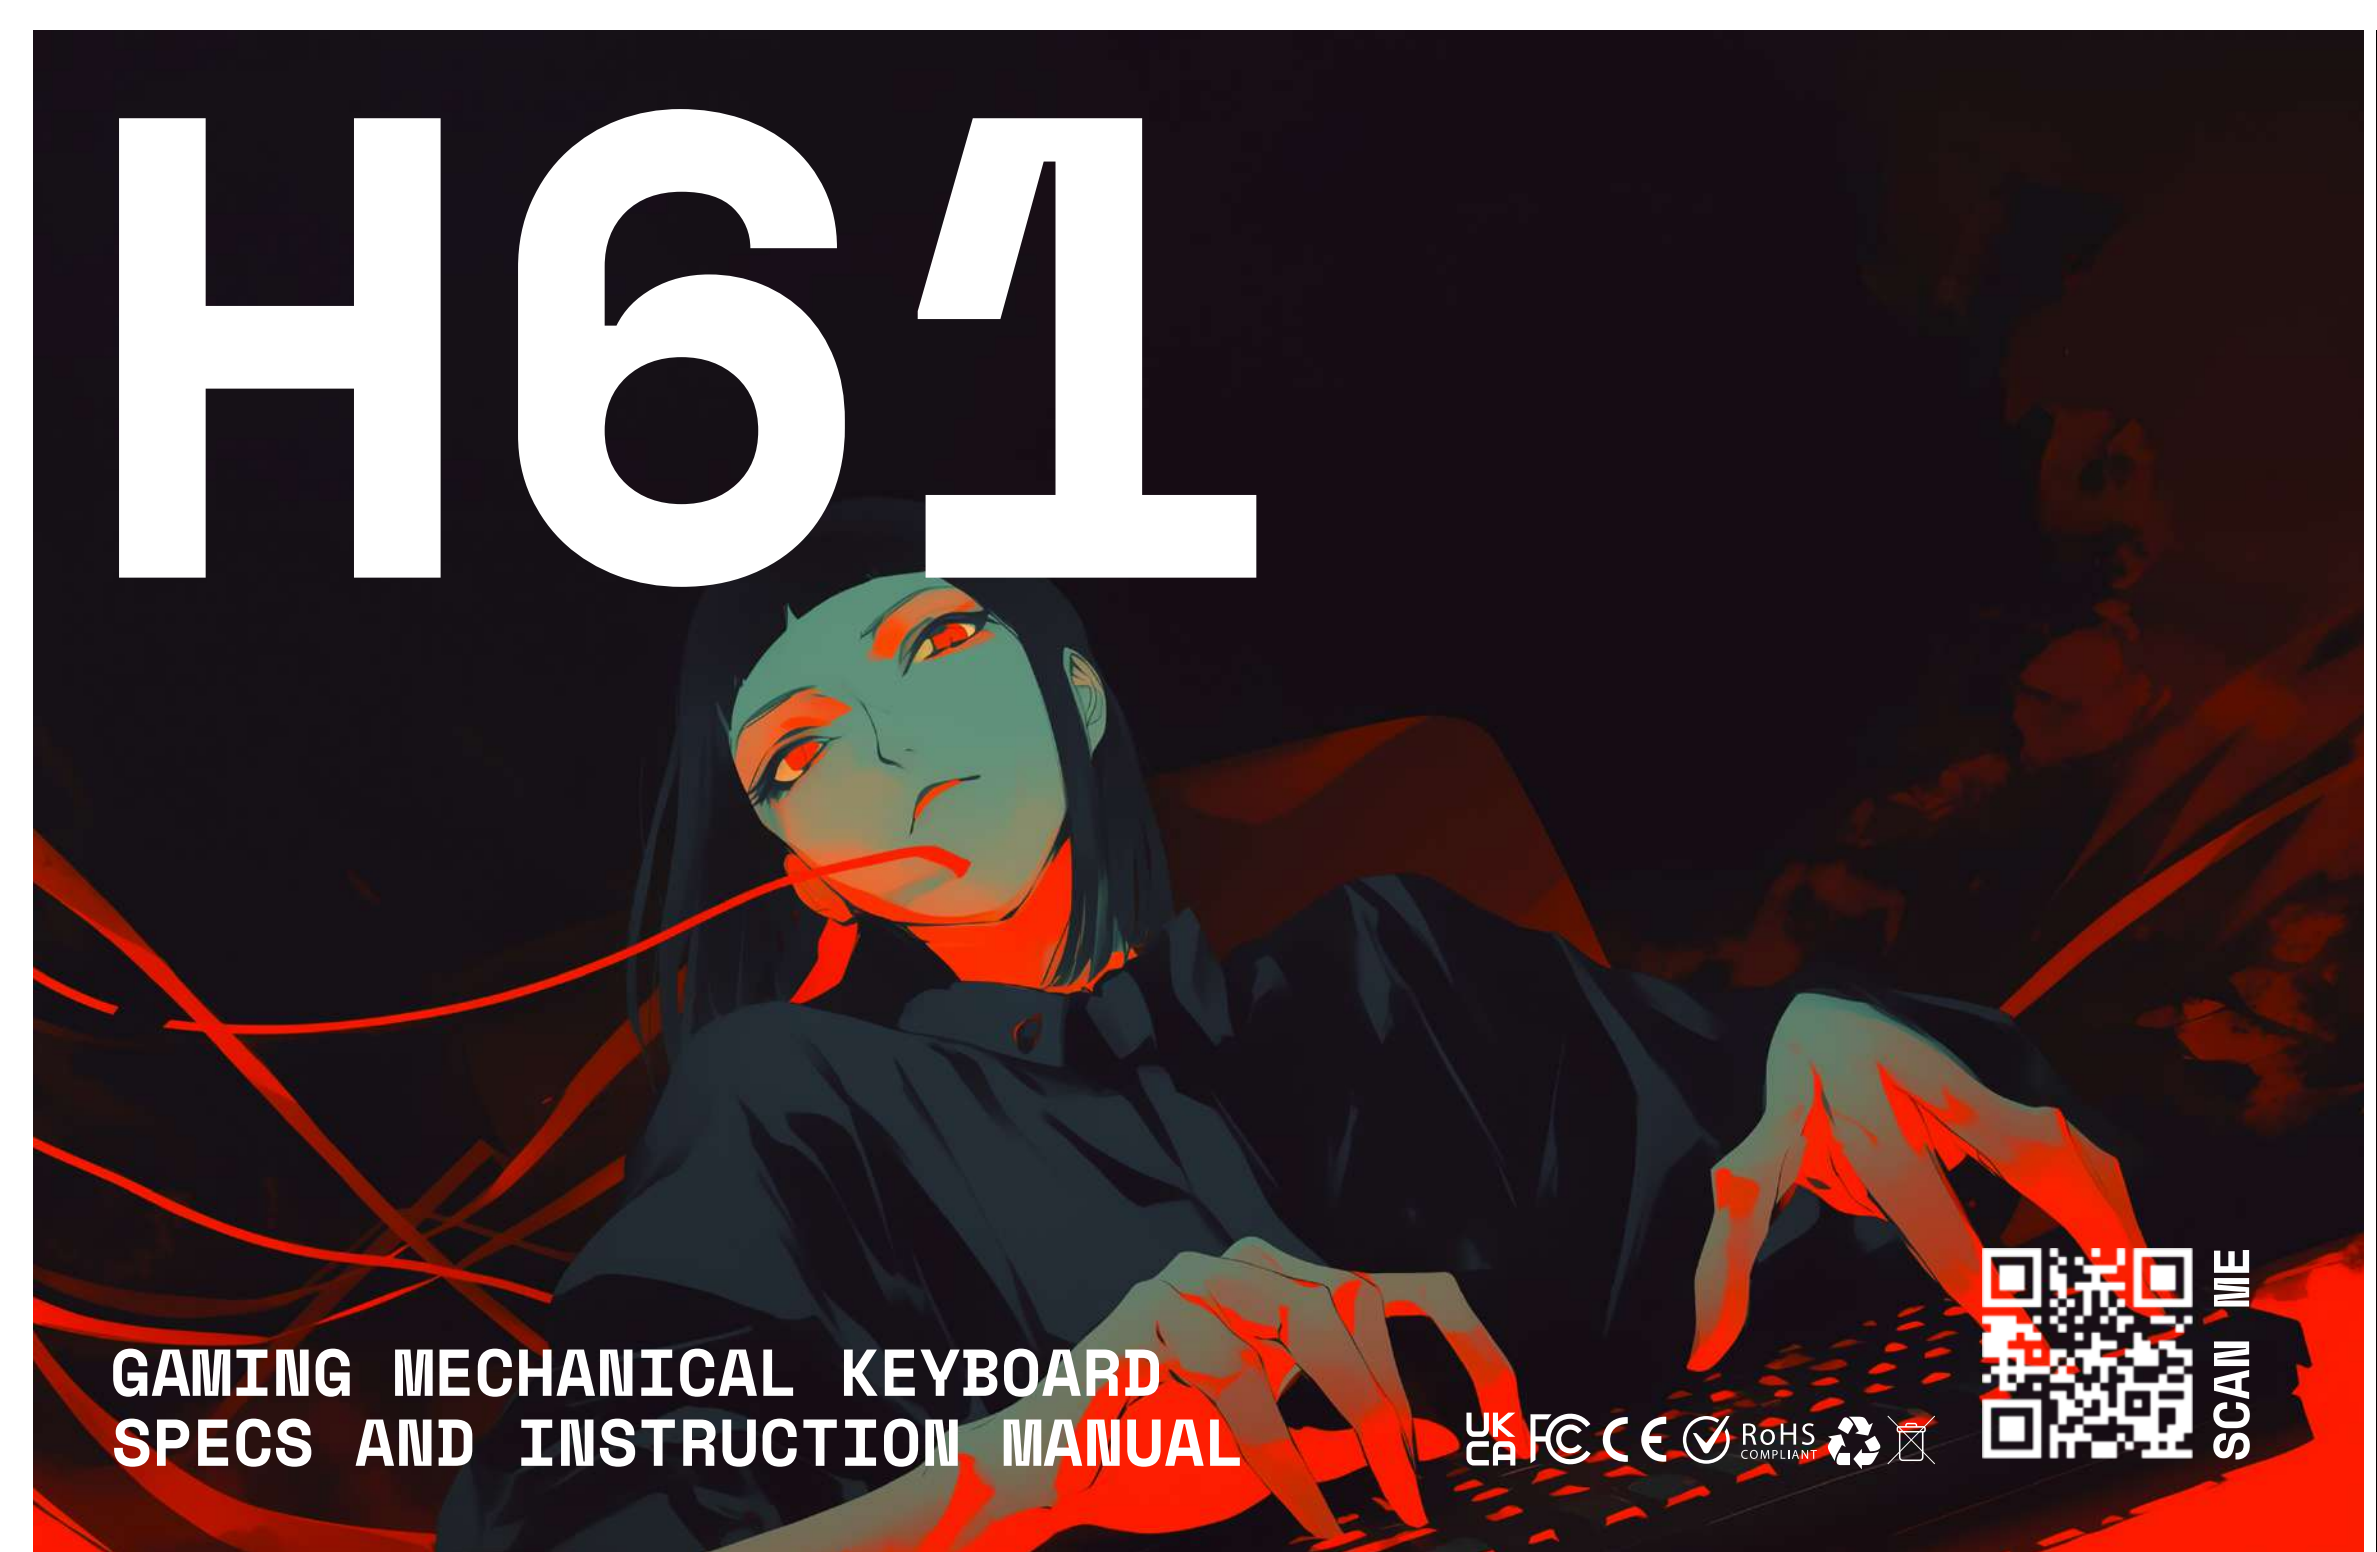

GAMING MECHANICAL KEYBOARD
SPECS AND INSTRUCTION MANUAL


UKCA CE RoHS RECYCLED

SCAN HERE


TECH SPECIFICATIONS

MODEL:	QwertyKey H61	ANTI-GHOST:	NKRO
KEY NR:	61 Key	POLLING RATE:	1000hz
CONNECTIVITY:	Type C Wired	COMPATIBILITY:	WINDOWS/MAC
STABILIZER TYPE:	Plate-mounted	DIMENSION:	200 x 100 x 38 mm
PCB TYPE:	Hotswap 3/5 pins, full RGB	WEIGHT:	0,6kg

 QWERTYKEY.EU
QWERTYKEY.RO

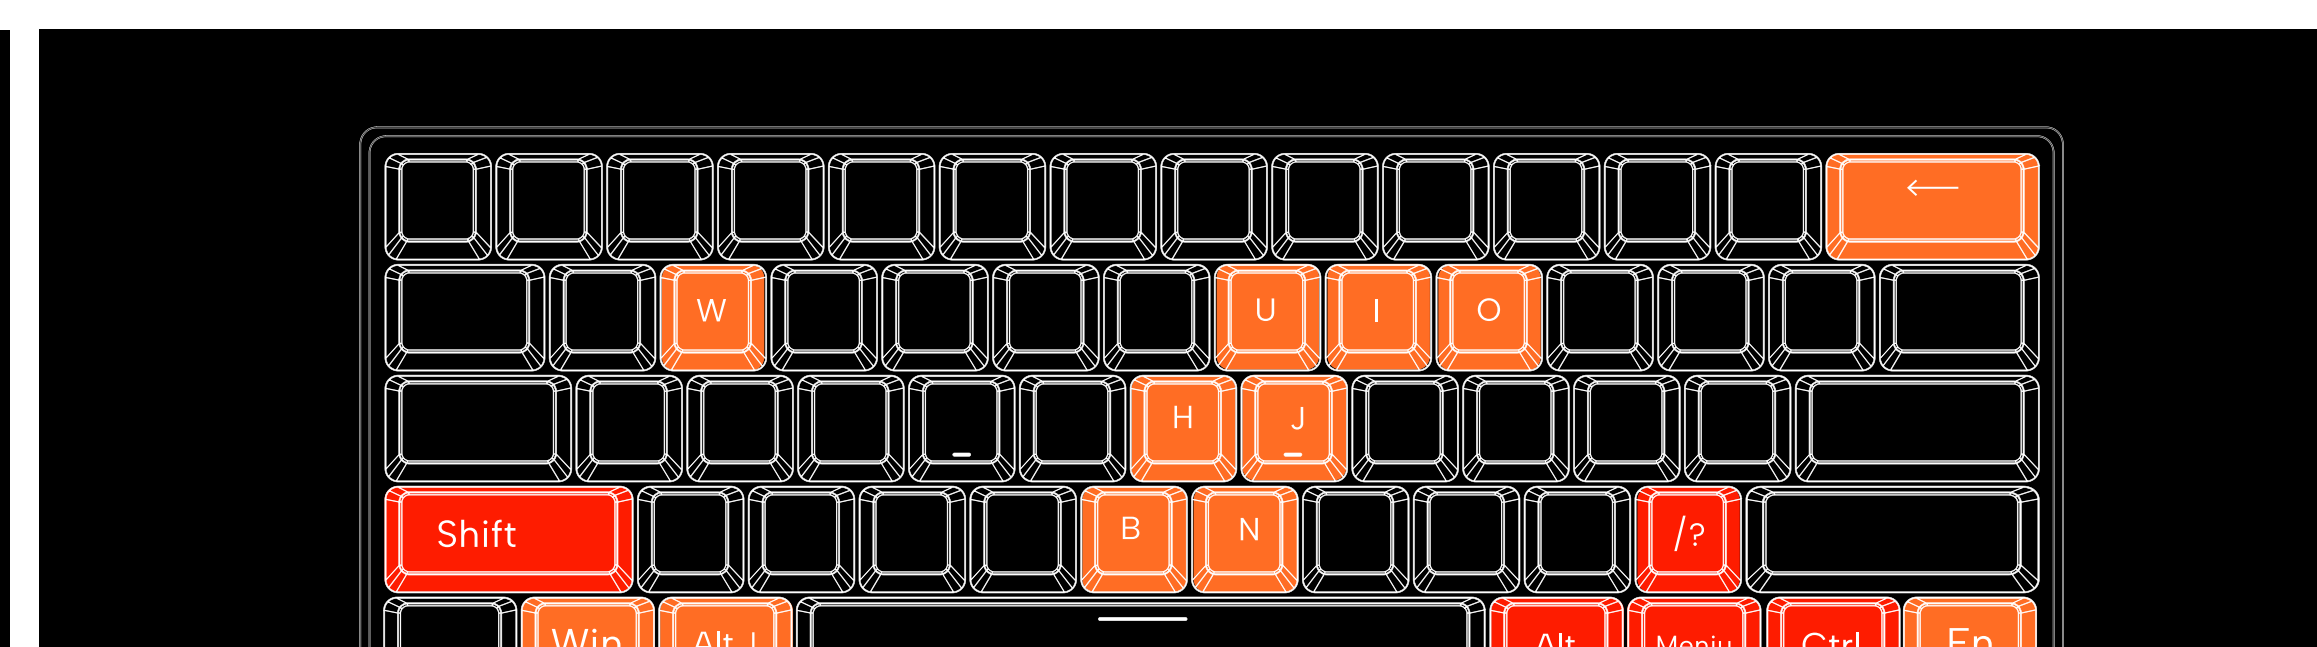

Fn + Win	→ Win	Fn + U	→ Print Screen
Fn + ←	→ Reset	Fn + I	→ Screen Lock
Fn + W	↔ Win + Ctrl	Fn + O	→ Pause
Fn + B	→ Delete	Fn + H	→ Insert
Fn + N	→ End	Fn + J	→ Home
Fn + Alt_L	→ Backlit switch between Red/Green/Blue	Fn + Shift	→ Backlit DIY Mode (Shift_L will flash white) Press FN+SHIFT_L to edit the backlit for each key, press again to finish

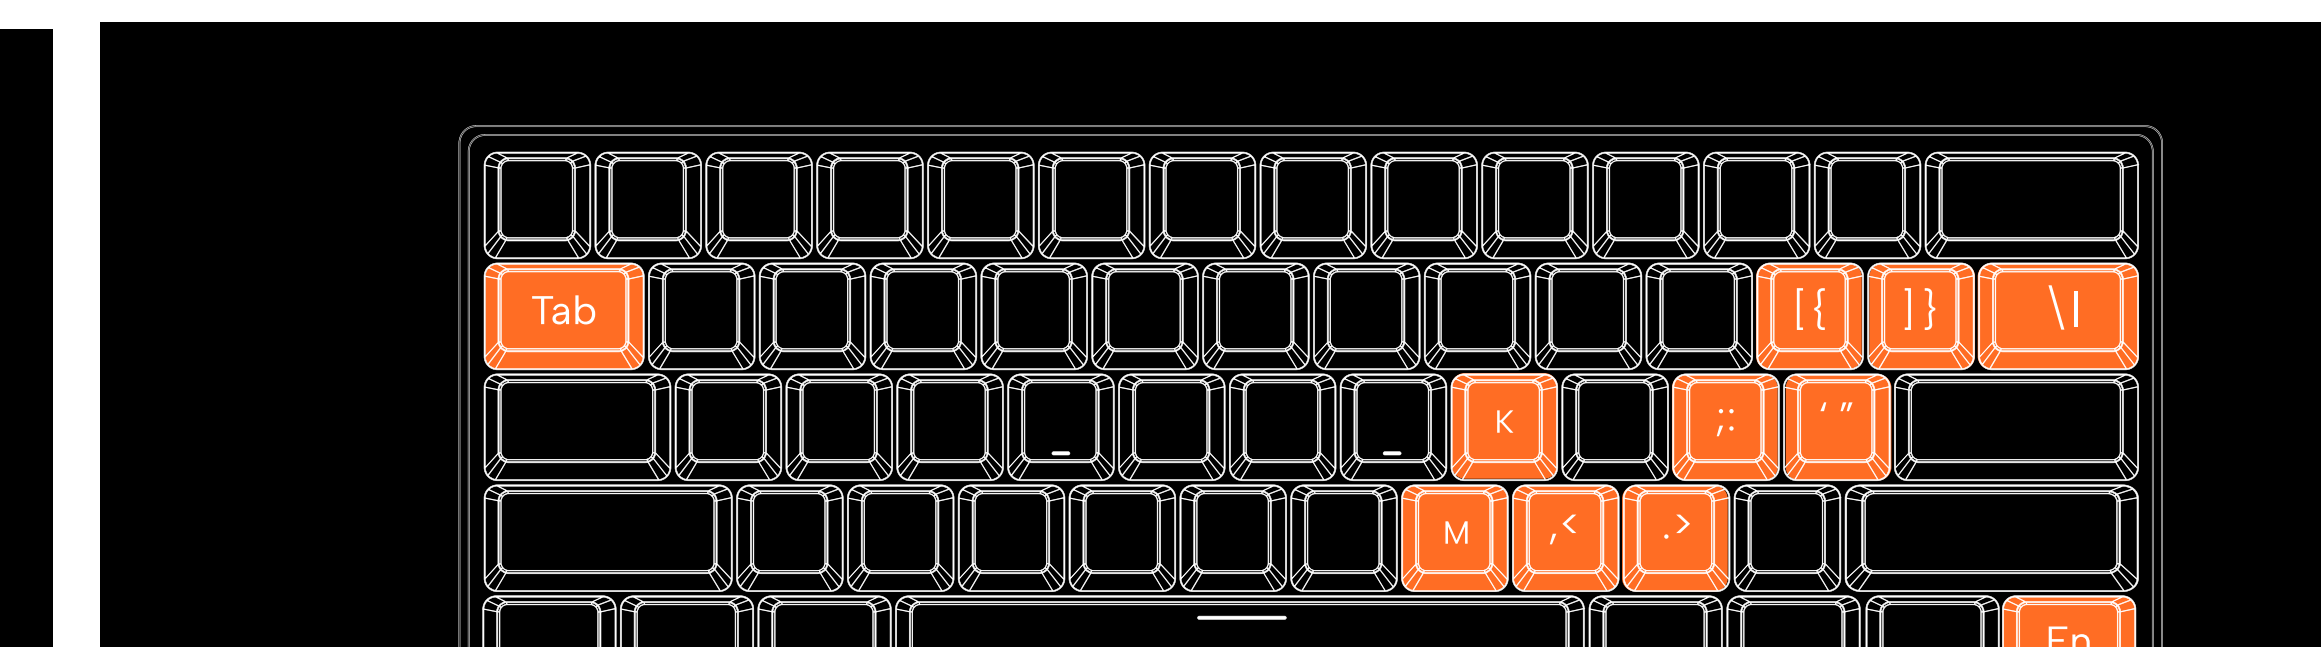 

Fn + \	→ RGB	Fn +]	→ [Half Moon]
Fn + Tab	→ [Color Cycle]	Fn + [{	→ [Half Moon]
Fn + " '	→ [Light Cycle]	Fn + , <	→ Windows
Fn + ; :	→ [Light Cycle]	Fn + . >	→ Apple
Fn + M	→ Page Down	Fn + K	→ Page Up



Fn + Esc	→ ~	Fn + G	→ Calculator
Fn + !	→ F1 (Fn+ 2@ = F2 Fn + += = F12)	Fn + Z	→ Previous Track
Fn + A	→ Mute	Fn + X	→ Next Track
Fn + S	→ Volume -	Fn + C	→ Pause/ Play
Fn + D	→ Volume +	Fn + V	→ Stop
Fn + F	→ Music	Fn + P	→ Backlit ON/OFF

REPLACING KEYCAPS AND SWITCHES

TOOLS INCLUDED

Keycap Puller
Switch Puller
USB Type C cable

INSTALLING SWITCHES

- Check that all the metallic pins of the switch are perfectly straight.
- Align the switch vertically
- Press the switch down until you hear a click. This means your switch clips have attached themselves to the keyboard plate.
- In case the switch doesn't work, check the metal pins again.

REMOVE SWITCHES


- Grab your switch puller and align the gripping teeth vertically (on the Y-Axis) at the center of the switch, as shown in the graphic example below.
- Grab the switch with the switch puller and apply pressure until the switch releases itself from the plate.
- Using firm but gentle force pull the switch away from the keyboard using vertical motion.

For any technical issues, please send an email to help@qwertykey.ro with your order number and a detailed description of your problem.


SPECIFICAȚII TEHNICE

MODEL:	QwertyKey H61	ANTI-GHOSTING:	NKRO
NR TASTE:	61 taste	RATĂ DE POLLING:	1000Hz
CONECTIVITATE:	cablu Type C	COMPATIBILITATE:	WINDOWS/MAC
TIP STABILIZATOR:	Plate-mounted	DIMENSIUNI:	200 x 100 x 38 mm
TIP PCB:	Hotswap 3/5 pins, full RGB	GREUTATE:	0,6 kg

 QWERTYKEY.EU
QWERTYKEY.RO

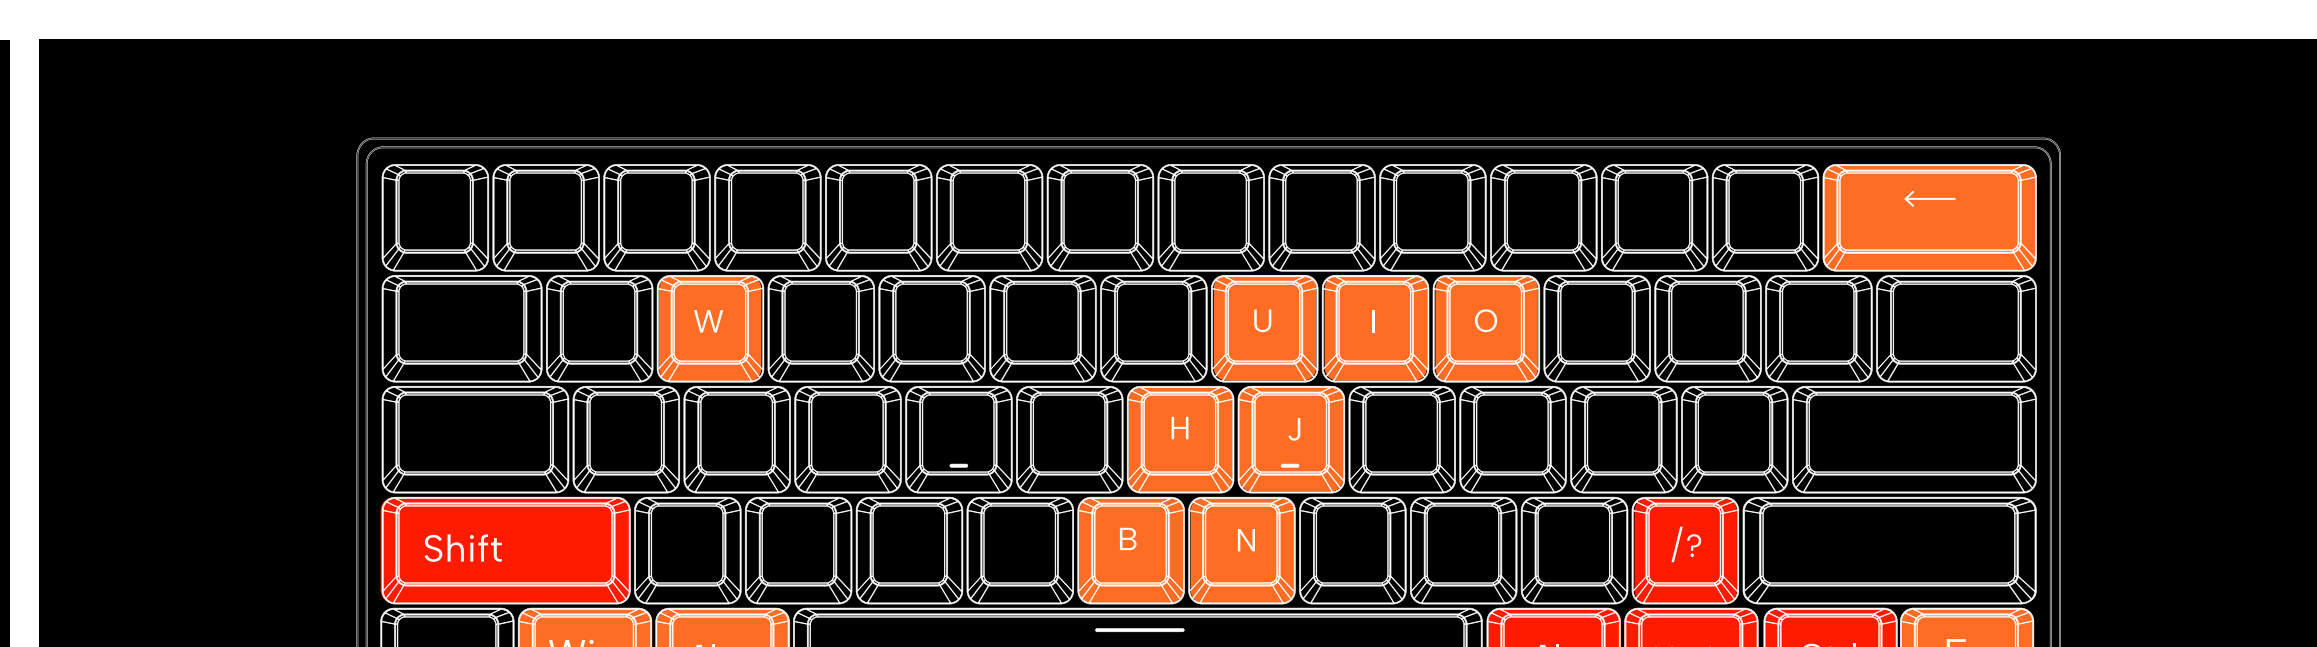

Fn + Win	→ Win	Fn + U	→ Captura Ecran
Fn + ←	→ Reset	Fn + I	→ Blocare Ecran
Fn + W	↔ Win + Ctrl	Fn + O	→ Pauza
Fn + B	→ Delete	Fn + H	→ Inserare
Fn + N	→ Sfarsit	Fn + J	→ Acasa
Fn + Alt_L	→ Comutare iluminare de fundal intre Rosu/Verde/Albastru	Fn + Shift	→ Mod DIY pentru iluminare (Shift_L va clipi albi) Apasă FN + SHIFT_L pentru a edita iluminarea fiecărei taste, apăsa din nou pentru a finaliza.

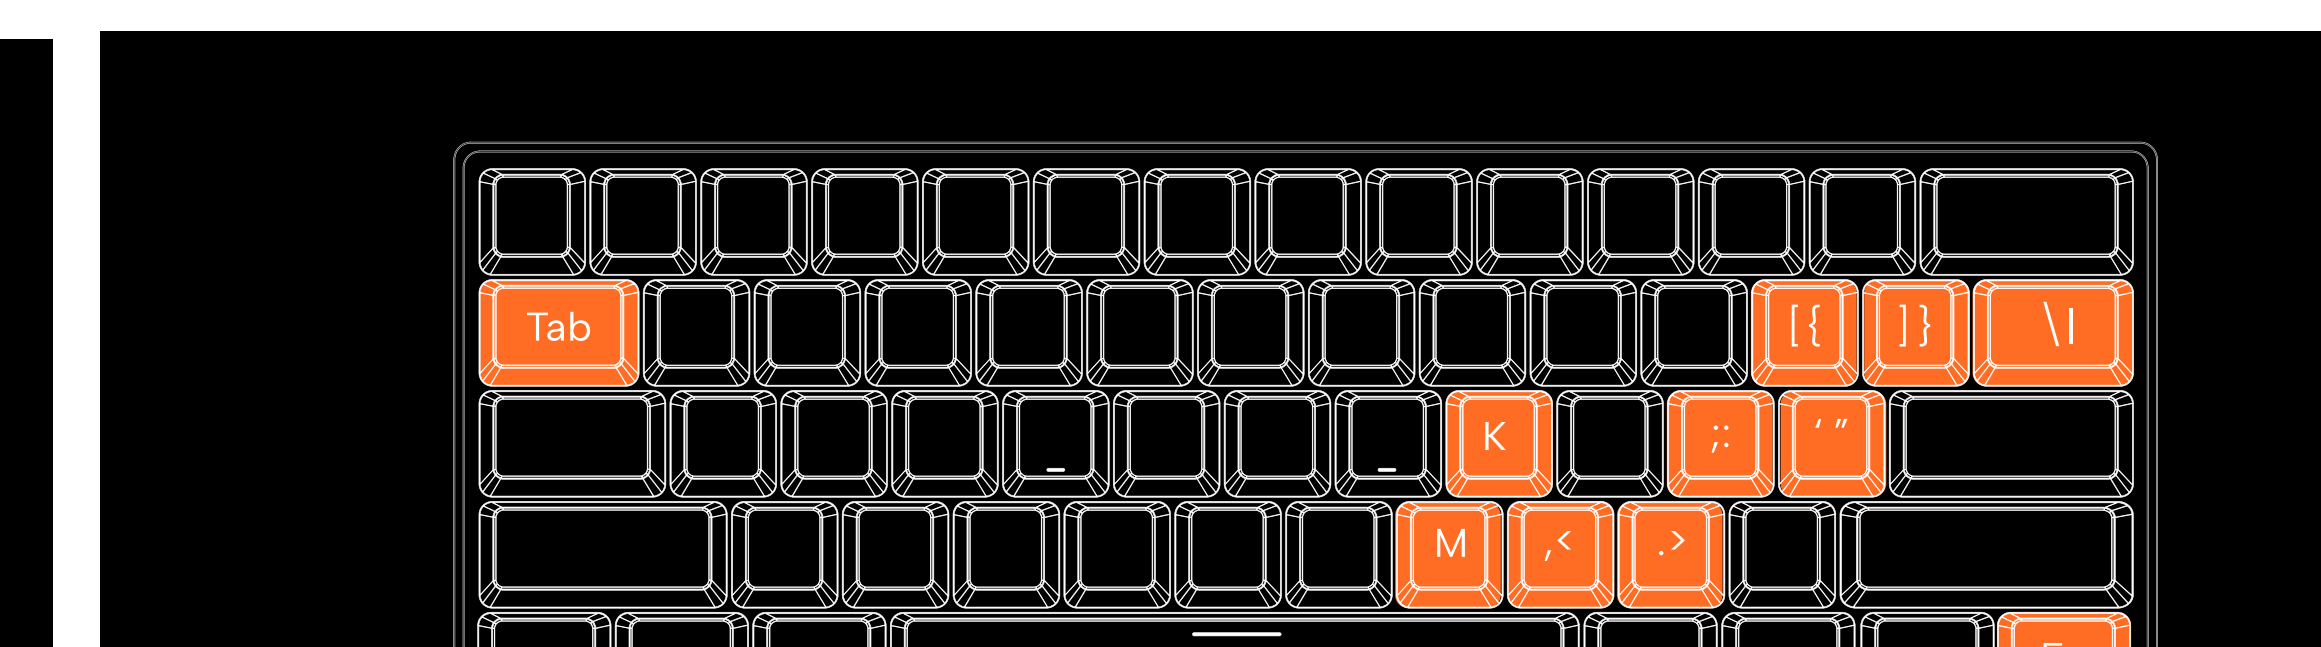 

Fn + \	→ RGB	Fn +]	→ [Half Moon]
Fn + Tab	→ [Color Cycle]	Fn + [{	→ [Half Moon]
Fn + " '	→ [Light Cycle]	Fn + , <	→ Windows
Fn + ; :	→ [Light Cycle]	Fn + . >	→ Apple
Fn + M	→ Derulare in jos	Fn + K	→ Derulare in sus



Fn + Esc	→ ~	Fn + G	→ Calculator
Fn + !	→ F1 (Fn+ 2@ = F2 Fn + += = F12)	Fn + Z	→ Piesa anterioara
Fn + A	→ Mut	Fn + X	→ Piesa urmatoare
Fn + S	→ Volum -	Fn + C	→ Pauza/ Play
Fn + D	→ Volum +	Fn + V	→ Stop
Fn + F	→ Muzica	Fn + P	→ Iluminare ON/OFF

ÎNLOCUIREA TASTELOR ȘI A SWITCH-URILOR

ACCESORII INCLUSE

Keycap Puller
Switch Puller
USB Type C cable

INSTALARE SWITCH-URI

- Verifică dacă toate pinii metalici ai switch-ului sunt perfect drepte
- Aliniază switch-ul vertical.
- Apasă switch-ul în jos până auzi un clic. Acest sunet indică faptul că pinii switch-ului s-au fixat pe placa tastaturii.
- În cazul în care switch-ul nu funcționează, verifică din nou pinii metalici.

ÎNDEPĂRTEAZĂ SWITCH-URILE

- În switch puller-ul și aliniaza „dinții” de prindere vertical (pe axa Y), în centrul switch-ului, așa cum este ilustrat în exemplul grafic de mai jos.
- Prinde switch-ul cu extractorul și aplică presiune până când acesta se desprinde de pe placă.
- Folosind o forță fermă, dar delicată, trage switch-ul în sus, pe direcție verticală, pentru a-l îndepărta de tastatură.

Pentru orice problemă tehnică, te rugăm să trimiți un email la help@qwertykey.ro menționând numărul comenzii și o descriere detaliată a problemei.