



SPECS AND INSTRUCTION MANUAL

TECH SPECIFICATIONS

MODEL:	QwertyKey H61
KEY NR:	61 Key
CONNECTIVITY:	Type C Wired
STABILIZER TYPE:	Plate-mounted
PCB TYPE:	Hotswap 3/5 pins, full RGB
ANTI-GHOST:	NKRO
POLLING RATE:	1000hz
COMPATIBILITY:	WINDOWS/MAC
DIMENSION:	200 x 100 x 38 mm
WEIGHT:	0,6kg

SCAN ME



HELP@QWERTYKEY.RO

SPECIAL FUNCTION KEYS

FN + U	PrtSc	FN + B	Del	FN + 3	F3	FN + 7	F7	FN + _	F11
FN + H	Ins	FN + M	PgDn	FN + 4	F4	FN + 8	F8	FN + =+	F12
FN + I	ScrLK			FN + 5	F5	FN + 9	F9		
FN + K	PgUp	FN + 2	F2	FN + 6	F6	FN + 10	F10		

MAC OS

FN + . > Switch to MAC system

Double Click FN: Special Function Keys for Mac

F1	Screen Brightness -	F4	Search function	F7	Previous Track	F10	Mute
F2	Screen Brightness +	F5	Speech recognition	F8	Pause/ Play	F11	Volume -
F3	Open Task Control	F6	Sleep	F9	Next Track	F12	Volume +

 
KEY COMBINATIONS

FN + BACKSPACE	Reset Keyboard	Press FN + w Enter Arrow Keys Function
FN + , <	Win	Press FN + w Again Quit Arrow Keys Function
FN + . >	Mac	

BACKLIGHT EFFECTS

FN + \	Switch Backlights Mode	FN + P	Backlights ON/OFF	FN +] }	Backlights Speed -
FN + ' "	Backlights Brightness +	FN + [{	Backlights Speed +	FN + Tab	Toggle light color
FN + ::	Backlights Brightness -				

WIRED MODE

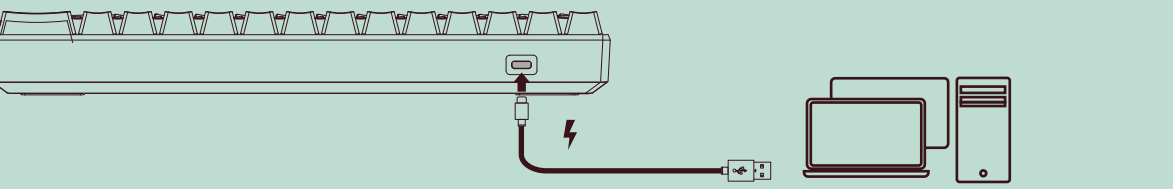

REPLACING KEYCAPS AND SWITCHES

TOOLS INCLUDED

 
- Keycap Puller
- Switch Puller
- USB Type C cable

INSTALLING SWITCHES

- Check that all the metallic pins of the switch are perfectly straight.
- Align the switch vertically
- Press the switch down until you hear a click. This means your switch clips have attached themselves to the keyboard plate.
- In case the switch doesn't work, check the metal pins again.

REMOVE SWITCHES

- Grab your switch Removal Tool and align the gripping teeth vertically (on the Y-Axis) at the center of the switch, as shown in the example graphic below.
- Grab the switch with the switch puller and apply pressure until the switch releases itself from the plate.
- Using firm but gentle force pull the switch away from the keyboard using vertical motion.



For any technical issues, please send an email to help@qwertykey.ro with your order number and a detailed description of your problem.

SPECIFICAȚII ȘI MANUAL DE INSTRUCȚIUNI

SPECIFICAȚII TEHNICE

MODEL:	QwertyKey H61
NR TASTE:	61 taste
CONECTIVITATE:	cablu Type C
TIP STABILIZATOR:	Plate-mounted
TIP PCB:	Hotswap 3/5 pins, full RGB
ANTI-GHOSTING:	NKRO
RATĂ DE POLLING:	1000Hz
COMPATIBILITATE:	WINDOWS/MAC
DIMENSIUNI:	200 x 100 x 38 mm
GREUTATE:	0,6 kg

SCAN ME



HELP@QWERTYKEY.RO

TASTE FUNCȚII SPECIALE

FN + U	PrtSc	FN + B	Del	FN + 3	F3	FN + 7	F7	FN + _	F11
FN + H	Ins	FN + M	PgDn	FN + 4	F4	FN + 8	F8	FN + =+	F12
FN + I	ScrLK	FN + 1	F1	FN + 5	F5	FN + 9	F9		
FN + K	PgUp	FN + 2	F2	FN + 6	F6	FN + 10	F10		

MAC OS

FN + . > Comutare la sistemul MAC

Dublu clic FN: Taste funcționale speciale pentru Mac

F1	Luminizitate ecran -	F4	Funcție de căutare	F7	Piesa anterioară	F10	Mute
F2	Luminizitate ecran +	F5	Recunoaștere vocală	F8	Pauză/Redare	F11	Volum -
F3	Deschide Controlul Sarcinilor	F6	Adormire	F9	Piesa următoare	F12	Volum +


COMBINAȚII DE TASTE

FN + BACKSPACE	Resetați tastatura	Apasă FN + w Activare funcția tastelor săgeți
FN + , <	Win	Apasă FN + w din nou Funcția de ieșire săgeți
FN + . >	Mac	

EFECTE DE ILUMINARE DE FUNDAL

FN + \	Schimbare mod iluminare de fundal	FN + P	Iluminare PORNIT/OPRIT	FN +] }	Viteză iluminare -
FN + ' "	Luminizitate iluminare +	FN + [{	Viteză iluminare +	FN + Tab	Comutare culoare lumină
FN + ::	Luminizitate iluminare -				

 MOD CU FIR

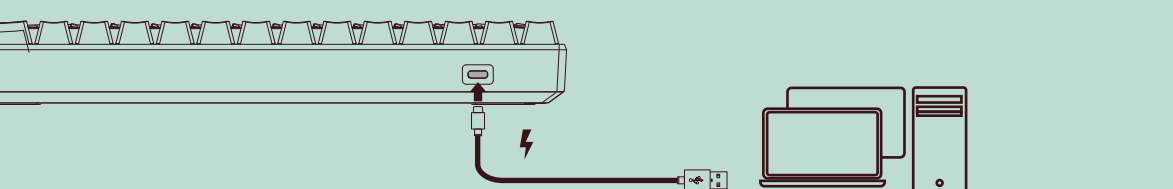

ÎNLOCUIREA CAPACELOR DE TASTE ȘI A SWITCH-URILOR

ACCESORII INCLUSE

 
 
- Keycap puller
- Switch puller
- Cablu USB Type-C

INSTALAREA SWITCH-URILOR

- Verifică dacă toți pinii metalici ai switch-ului sunt perfect drepti.
- Aliniați comutatorul vertical
- Apăsăți comutatorul în jos până când auziți un clic. Aceasta înseamnă că clemele comutatorului s-au prins de placa tastaturii.
- În cazul în care comutatorul nu funcționează, verificați din nou pinii metalici.

ÎNDEPĂRTAȚI SWITCH-URILE

- Prindeți instrumentul de îndepărtare a comutatoarelor și aliniați dinții de prindere vertical (pe axa Y) la centrul comutatorului, așa cum este arătat în imaginea de mai jos.
- Prindeți comutatorul cu instrumentul de îndepărtare a comutatoarelor și aplicați presiune până când comutatorul se eliberează de pe placă.
- Folosind o forță fermă, dar delicată, trageți comutatorul de pe tastatură folosind o mișcare verticală.

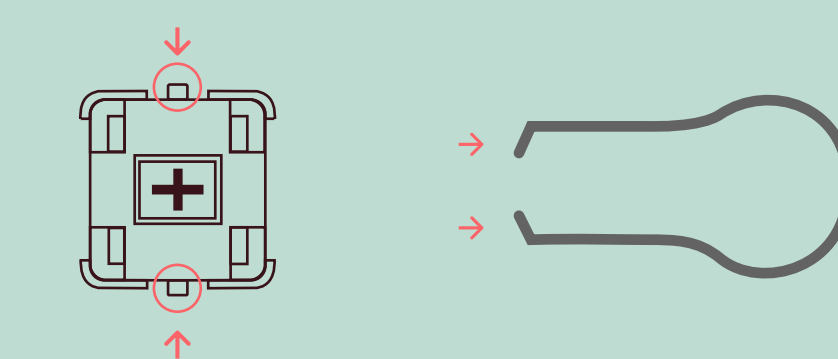

Pentru orice probleme tehnice, vă rugăm să trimiteți un email la help@qwertykey.ro, incluzând numărul comenzii și o descriere detaliată a problemei.