

USER MANUAL


QK61

HE-AL

SCAN ME!



QK61 HE-AL

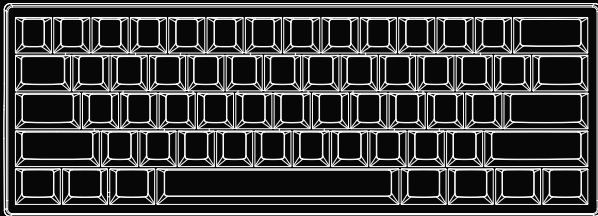

TECH SPECIFICATIONS

MODEL:	QK61 HE-AL
KEY NR:	61 keys
CONNECTIVITY:	Type C wired
STABILIZER TYPE:	Plate-mounted
PCB TYPE:	Full RGB

ANTI-GHOST:	NKRO
POLLING RATE:	1000hz
COMPATIBILITY:	Windows/Mac
DIMENSION:	mm
WEIGHT:	1.0kg

QWERTYKEY.EU
QWERTYKEY.RO



SCAN ME

Lighting Control

FN + ; backlight brightness -
FN + ' backlight brightness +
FN + [lighting effect speed -
FN +] lighting effect speed +
**FN + ** Switch lighting effects
FN + TAB Change lighting direction
FN + ENTER Switch lighting color
FN + BACKSPACE Turn backlight on/off
Hold FN+Space Restore factory settings
(3 seconds)

System & Function Keys

FN + ESC `
FN + A Windows mode
FN + S Mac mode
FN + Z Switch logo lighting effects (Default effects: flowing light, neon, breathing cycle, constant light, off)
FN + X Change logo light color

Additional FN Key Functions

FN + 0 - Pause	FN + L - Page Up
FN + I - Scroll Lock	FN + M - Delete
FN + U - Print Screen (PrtSc)	FN + . (>) - Page Down
FN + J - Insert	FN + , (<) - End
FN + K - Home	

Arrow Key Functions (via FN combinations)

FN + ?/	Up arrow
FN + ALT (right)	Left arrow
FN + MENU	Down arrow
FN + CTRL (right)	Right arrow

Caps Lock Indicator

When uppercase is active: white light stays on
When lowercase: returns to the current backlight setting

WIN Lock Indicator

When locked: the WIN key shows a steady white light
When unlocked: it returns to the current default backlight

Function Key Layer

FN + 1! to =+ - Acts as F1 to F12
FN + N - Toggle between full-key rollover and 6-key rollover
FN + WIN - Lock / Unlock the Windows key
FN + SHIFT + R - Turn SOCD on/off (Simultaneous Opposite Cardinal Directions)

Software

For more features, please use the online software:
<https://he.qwertykey.eu/>

Device name QK61 HE

Replacing keycaps and switches

Tools Keycap/Switch Puller
included USB Type C to A cable

Install Switch

- 1.Align the switch vertically
2. Press the switch down until you hear a click.
This means your switch clips have attached themselves to the keyboard plate.



Push straight
down



Example of a switch as
seen from top after you
remove the keycap to prepare
switch removal

The switch puller tool aligns vertically to the switch to unclip the plastic securing the switch to the plate. Before installing switches, be sure the RGB LED with the correct direction.

Remove Switch



- 1.Grab your Keycap/Switch puller tool and align the gripping teeth vertically (Y-axis) at the center of the switch, as shown below
- 2.Grab the switch with the tool and apply pressure until the switch releases itself from the plate.
- 3.Using firm but gentle force pull the switch away from the keyboard using a vertical motion


For any technical issue, please send an email to help@qwertykey.ro with your order number and a detailed description of your problem.



DO NOT connect the keyboard directly to an electrical outlet!

The keyboard is designed to be powered only via a USB cable connected exclusively to a compatible device, such as a laptop or PC.

QK61 HE-AL

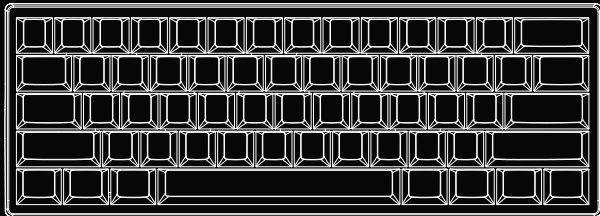

TECH SPECIFICATIONS

MODEL:	QK61 HE-AL
KEY NR:	61 keys
CONNECTIVITY:	Type C wired
STABILIZER TYPE:	Plate-mounted
PCB TYPE:	Full RGB

ANTI-GHOST:	NKRO
POLLING RATE:	1000hz
COMPATIBILITY:	Windows/Mac
DIMENSION:	mm
WEIGHT:	1.0kg

QWERTYKEY.EU
QWERTYKEY.RO



Controlul iluminării

FN + ;	Luminozitate iluminare fundal -
FN + ' 	Luminozitate iluminare fundal +
FN + [	Viteză efect iluminare -
FN +]	Viteză efect iluminare +
FN + \	Schimbă efectele de iluminare
FN + TAB	Schimbă direcția iluminării
FN + ENTER	Schimbă culoarea iluminării
FN + BACKSPACE	Pornește/Oprește iluminarea
Apasa FN+Space (3 secunde)	Restaurare setări din fabrică

Taste sistem

FN + ESC `	
FN + A	Mod Windows
FN + S	Mod Mac
FN + Z	Schimbă efectele de iluminare ale logo-ului (efecte implicite: lumină fluidă, neon, respirație, lumină constantă, oprit)
FN + X	Schimbă culoarea iluminării logo-ului

Funcții suplimentare ale tastei FN

FN + 0 - Pauză	FN + L - Pagină în sus (Page Up)
FN + I - Scroll Lock	FN + M - Ștergere (Delete)
FN + U - Captură ecran (PrtSc)	FN + . (>) - Pagină în jos (Page Down)
FN + J - Inserare	FN + , (<) - Sfârșit (End)
FN + K - Acasă (Home)	

Funcțiile tastelor săgeți (prin combinații FN)

FN + ?/	Săgeată sus
FN + ALT (dreapta)	Săgeată stânga
FN + MENU	Săgeată jos
FN + CTRL (dreapta)	Săgeată dreapta

Indicator Caps Lock

Când literele mari sunt active: lumina albă rămâne aprinsă

Când literele mici: revine la setarea curentă a iluminării

Indicator blocare WIN (tasta Windows)

Când este blocată: tasta WIN afișează o lumină albă constantă

Când este deblocată: revine la iluminarea implicită curentă

Stratul tastelor funcționale

FN + 1! până la += - Funcționează ca tastele F1-F12

FN + N Comută între rollover la toate tastele și rollover 6 taste

FN + WIN Blochează / Deblochează tasta Windows

FN + SHIFT + R Activează/dezactivează SOCD (Simultaneous Opposite Cardinal Directions)

Software

Pentru mai multe funcții, utilizați software-ul online:

<https://he.qwertykey.eu/>

Nume dispozitiv: QK61 HE

Înlocuirea tastelor și a switch-urilor

Unelte Keycap/Switch Puller

include: Cablu USB Type-C la USB-A

Instalare switch

1. Aliniați switch-ul vertical
2. Apăsați switch-ul în jos până auziți un „click”
Asta înseamnă că clemele switch-ului s-au fixat pe placa tastaturii



Apăsați
drept în jos



Exemplu: switch văzut
de sus după ce a fost
scoasă tasta pentru a
pregăti demontarea

Switch puller-ul se aliniază vertical cu switch-ul pentru a desprinde clemele de plastic care îl fixează pe placă. Înainte de instalarea switch-urilor, asigurați-vă că LED-ul RGB este orientat corect.

Îndepărtare switch



1. Luați extractorul de taste/switch-uri și aliniați dinții de prindere vertical (axa Y) în centrul switch-ului, ca în imagine
2. Prindeți switch-ul cu unealta și aplicați presiune până când acesta se desprinde singur din placă
3. Folosind o forță fermă dar delicată, trageți switch-ul în sus, pe verticală, pentru a-l scoate din tastatură

Pentru orice problemă tehnică, trimiteți un email la help@qwertykey.ro cu numărul comenzii și o descriere detaliată a problemei.



NU conectați tastatura direct la o priză electrică!

Tastatura este proiectată să fie alimentată doar printr-un cablu USB conectat la un dispozitiv compatibil, cum ar fi un laptop sau PC.